Xen Hypervisor

Xen Hypervisor: A brief look

Powerful. Flexible. Open.

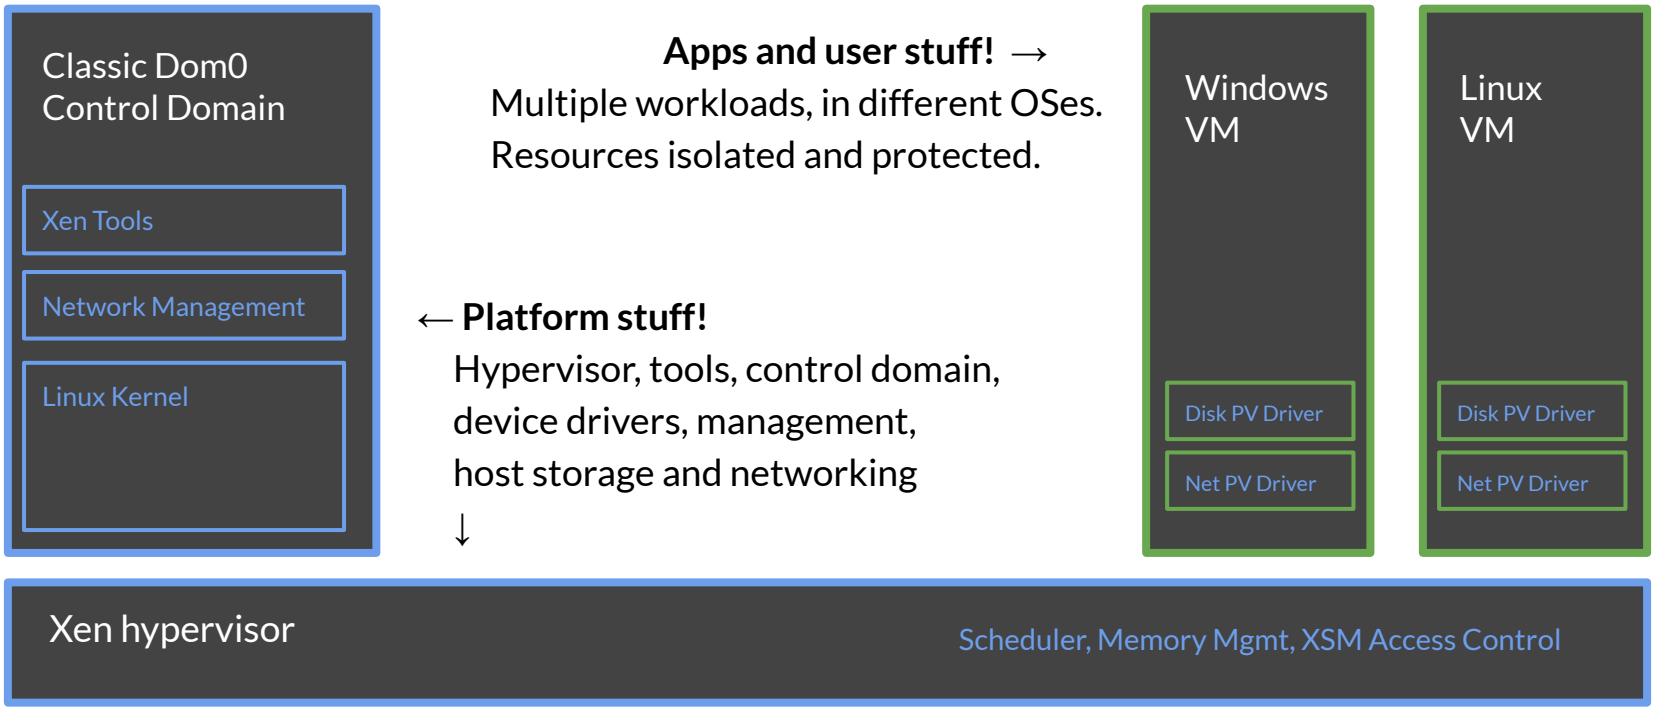

Xen Hypervisor: A brief look

Powerful. Flexible. Open.

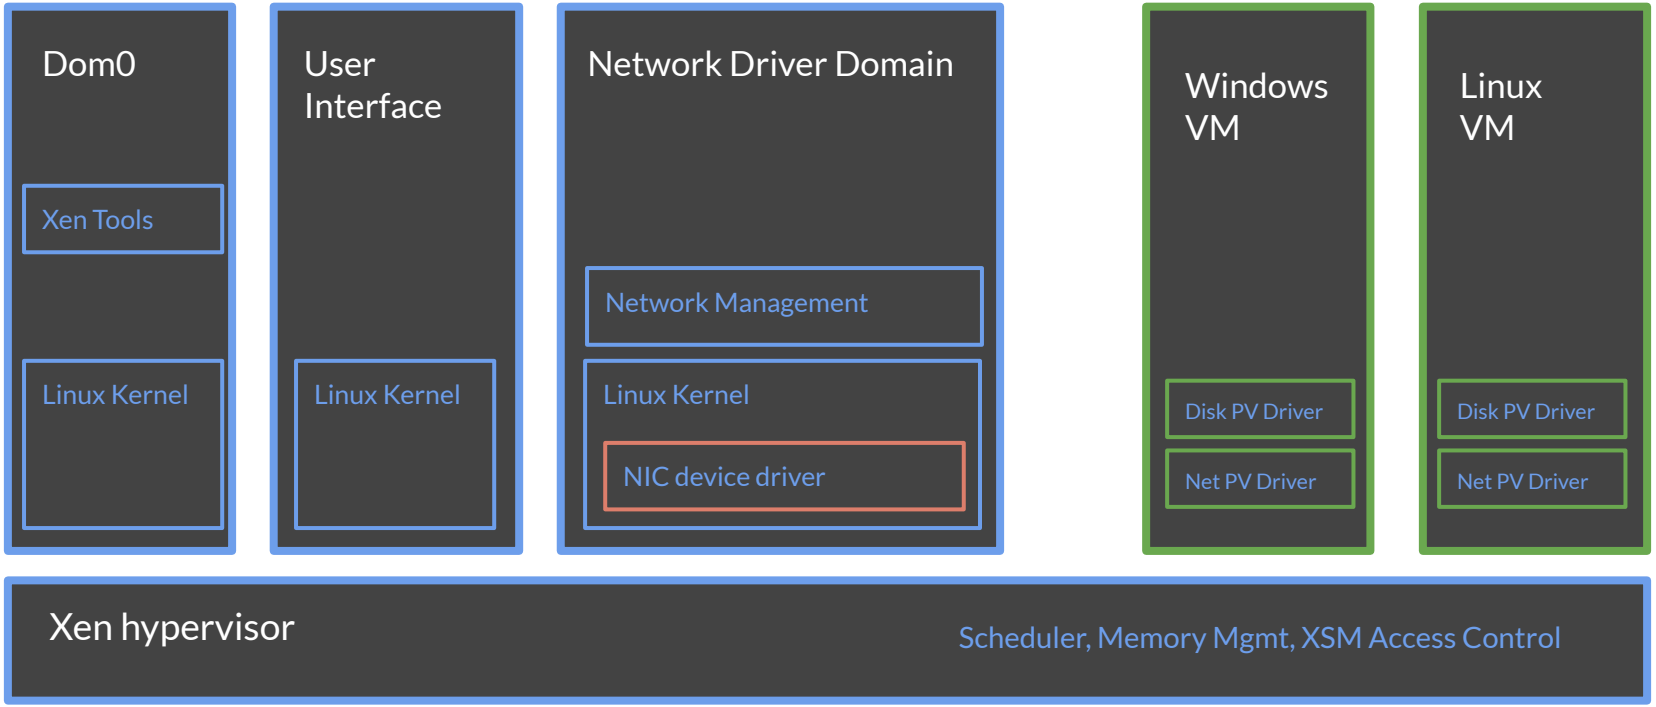

Yes, but can I run it on my

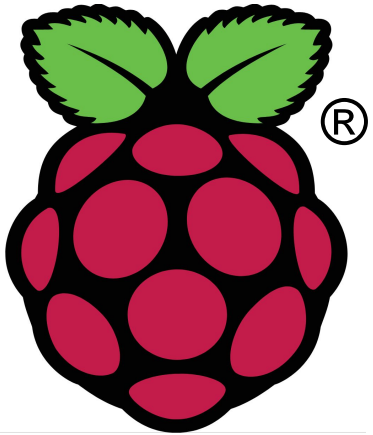

?

hmm, let’s see about that...

Bitbaking Xen for the Raspberry Pi 4

Our **essential basic ingredients** are in layers:

- Xen support is in **meta-virtualization** (source, list)
- Raspberry Pi 4 support is in **meta-raspberrypi** (source)
- We'll use **poky** with **meta-openembedded**

Add in a *fresh zesty sprinkle* of:

- a **brand-new Xen-on-Raspberry Pi 4 patch series for meta-virtualization**

… along with some **classic Yocto spiciness**:

- configure your local.conf:

```
MACHINE=”raspberrypi4-64"
DISTRO_FEATURES_append = " virtualization xen";
QEMU_TARGETS = "i386 x86_64 aarch64 arm"
```

"Bake!" : **`bitbake xen-image-minimal`** → SD-card image!

Xen for the Raspberry Pi 4 : SD-card

The card image contains two partitions:

- **boot**, which includes:
  - xen : hypervisor binary
  - Image : Linux kernel binary
  - bcm2711-rpi-4-b.dtb : Device tree for the Raspberry Pi 4
  - overlays : Device tree overlays
  - boot.scr : Xen-specific u-boot launch script
  - config.txt : Raspberry Pi configuration settings
  - ...

- **root** filesystem for Domain 0
  - poky Linux filesystem
  - contains the familiar Xen tools
  - *does not contain* the hypervisor or the dom0 Linux kernel

Xen Hypervisor on Raspberry Pi 4

Insert the SD card, fire up the power, … stand well back...

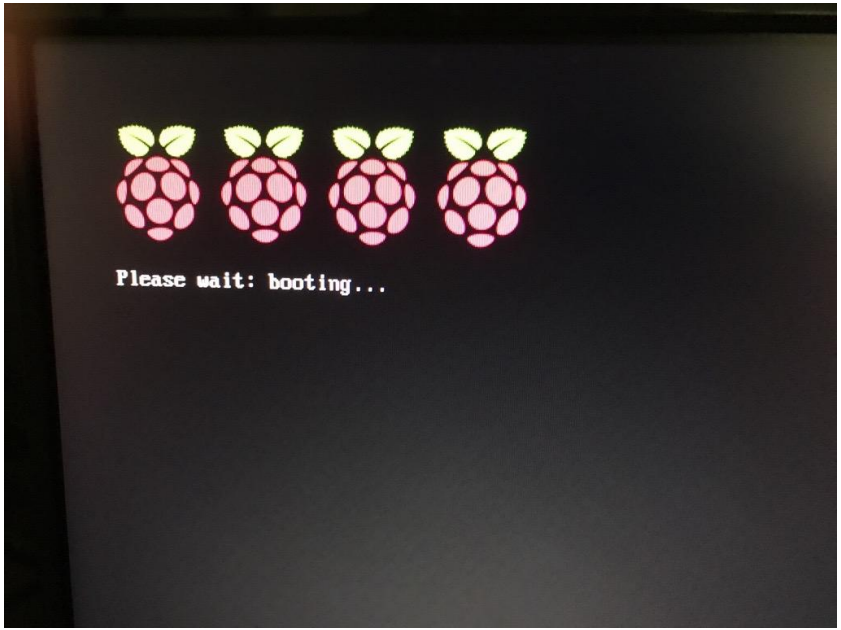

Xen Hypervisor on Raspberry Pi 4

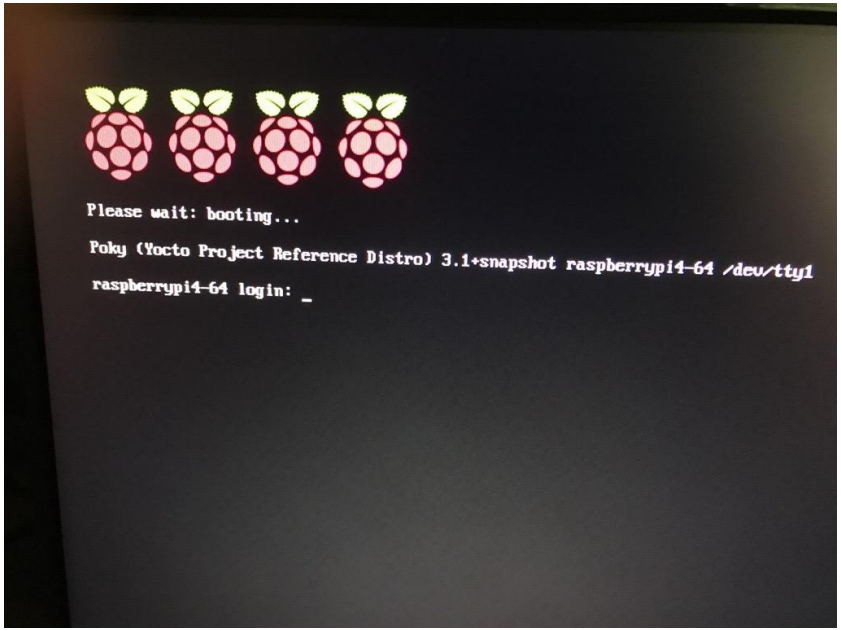

Hooray!

Xen Hypervisor on Raspberry Pi 4

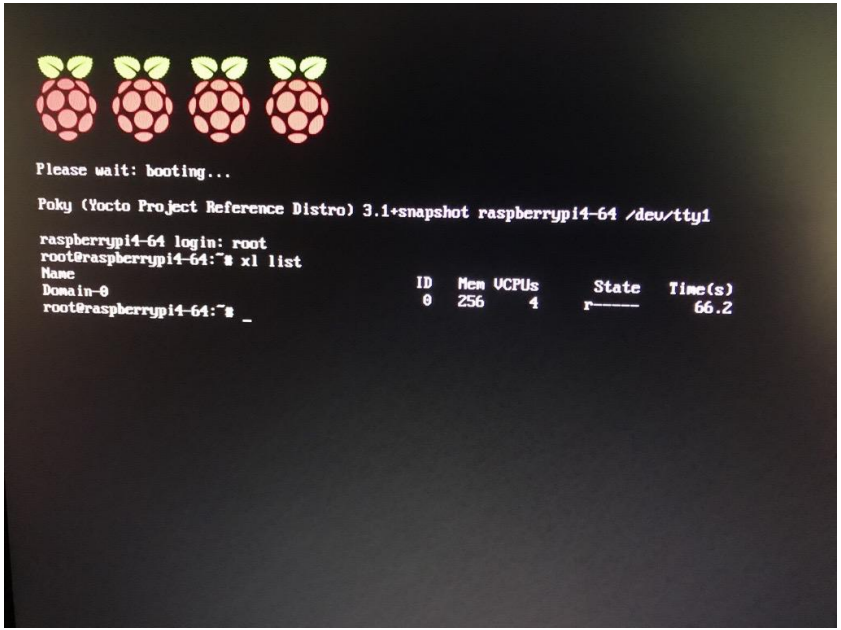

ok, proof that it is actually there and working

Xen Hypervisor on Raspberry Pi 4: serial

To obtain for yourself a luxury device such as this, the terms you can use to proceed are: “pl2303hx USB serial”

Xen Hypervisor on Raspberry Pi 4: serial

OK - time to wire it up! There are three wires to connect:

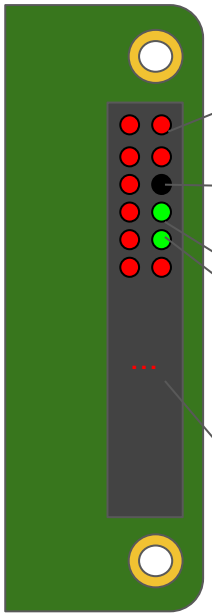

Pins indicated red here: *nope, do not need those for this.*

This one: **good**, you want it: that's **ground**: connect it to the black single wire on the USB serial thing

These two: **also good**: **RX** and **TX**
There's probably some way to get them the right way around, but: **don't use the red wire** off the USB thing, and then you can just try the other two either way and one way will work: **bingo!**

there are loads more pins down here too,
I just didn't draw them all

Xen Hypervisor on Raspberry Pi 4: serial

On a nearby machine with the USB serial device plugged in: `minicom /dev/ttyUSB3`

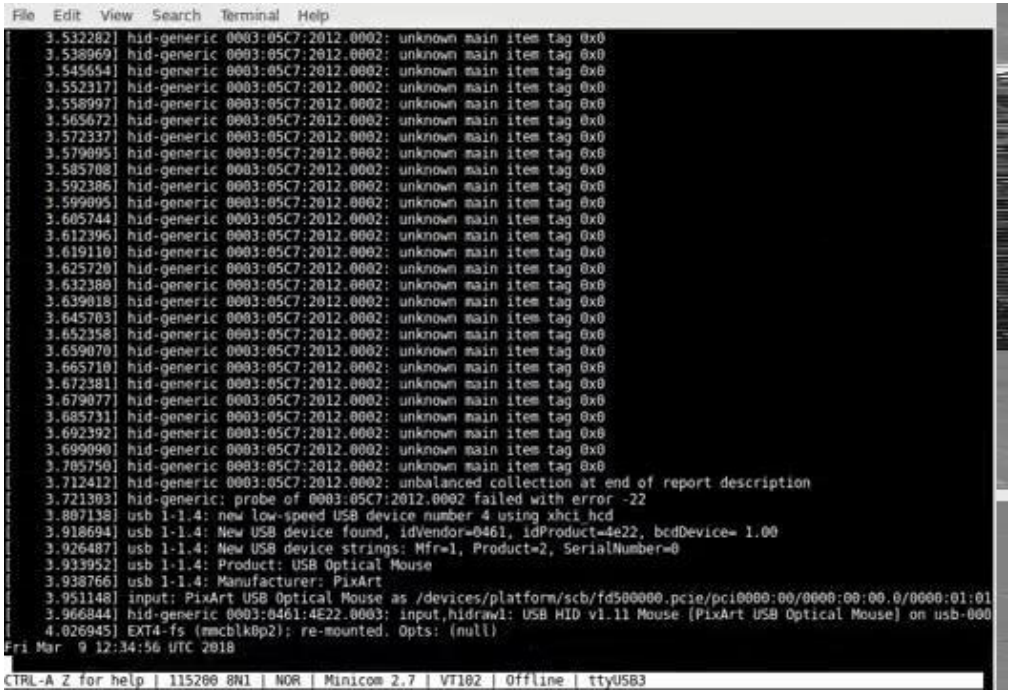

Xen for the Raspberry Pi 4 : simple Xen commands

Testing basic Xen functionality at the console:

- xl list - list running VMs
- xl info - show data about the current hypervisor
- ls -l /dev/xen - examine Linux's Xen device nodes
- xenstore-ls - read the contents of the XenStore tree
- dmesg | grep Xen - see the Linux kernel messages relating to Xen
- xl dmesg - see the Xen boot messages

All these should be familiar if you've used Xen on other systems - and now available on the Raspberry Pi 4!

Xen for the Raspberry Pi 4 : building a guest VM

Let’s boot Yocto Linux inside Yocto Linux! First, build the guest filesystem image:

- **bitbake xen-guest-image-minimal**

Install the pieces needed to run a guest into the running Domain-0 of the Pi:

- Copy in the built **guest filesystem** in a file:
  - .../work/raspberrypi4_64-poky-linux/xen-guest-image-minimal/*/deploy-xen-guest-image-minimal-image-complete/xen-guest-image-minimal-raspberrypi4-64.ext3
    - to: /home/root/xen-guest-image-minimal-raspberrypi4-64.ext3
- Copy in the **guest kernel** file: Image
  - .../work/raspberrypi4_64-poky-linux/linux-raspberrypi/*/deploy-linux-raspberrypi/Image
    - to: /home/root/Image
- Create a new file: **guest.cfg**
  - kernel = "/home/root/Image"
    cmdline = "console=hvc0 earlyprintk=xen sync_console root=/dev/xvda"
    memory = "256"
    name = "rpi4-xen-guest"
    vcpus = 1
    serial="pty"
    disk = ['phy:/dev/loop0,xvda,w']
    vif=['mac=00:11:22:66:88:22,bridge=xenbr0,type=netfront',]

Xen for the Raspberry Pi 4 : prepare for a guest VM

Networking - so the guest can get its own network access:

- Create a bridge and move the eth0 physical device onto it:
  - killall -SIGUSR2 udhcpc # release your existing DHCP lease
  - brctl addbr xenbr0 # create a new bridge called “xenbr0”
  - brctl addif xenbr0 eth0 # put eth0 onto xenbr0
  - killall udhcpc # terminate the DHCP client daemon
  - udhcpc -R -b -p /var/run/udhcpc.xenbr0.pid -i xenbr0 # restart the DHCP client daemon on the new bridge

Disk:

- Loopback mount the ext3 guest filesystem file to make it available as a device
  - losetup /dev/loop0 /home/root/xen-guest-image-minimal-raspberrypi4-64.ext3

Xen for the Raspberry Pi 4 : running a guest VM

xl create -c guest.cfg

Xen for the Raspberry Pi 4 : the current patch series

OK, so what's in this new meta-virtualization patch series to make this work?

- A new "dynamic layer" for *settings that are specific to Xen-on-Raspberry-Pi-4*
  - A series of Linux kernel patches: DMA fixes from the Xen ARM maintainer
  - Enabling the Yocto kernel cache with the Raspberry Pi kernel to build with meta-virtualization
  - Enabling the hardware interrupt controller that Xen needs in the rpi-config
  - Custom Xen-specific bootloader script:
    - Loads the Xen hypervisor binary
    - Loads the Linux kernel
    - Amends the device tree, that the Raspberry Pi has already processed before u-boot
    - Sets the Dom0 kernel command line, to include Xen config settings eg. for the console
  - A Xen hypervisor "defconfig", with settings specific for the Raspberry Pi 4 hardware
  - A Xen-specific SD-card class, to include the Xen binary on the first partition of the image
- A new ARM assembly Xen patch to implement an atomic primitive for spinlocks with the latest gcc in Yocto
- Xen version upgrade to 4.13 (and 4.14 should be coming soon)
- A new method of engaging Xen-specific config settings when DISTRO_FEATURES includes 'xen'

Xen in meta-virtualization: beyond the Pi!

Other example platforms for running **Xen** with Yocto, using **meta-virtualization**:

- **Intel x86-64**: ubiquitous!
  - meta-virtualization has wic tool integration
    - enables simple production of a bootable image:
      - `wic create directdisk-xen -e xen-image-minimal`
      - `dd` the output file to your hard disk and boot it!

- **PCEngines APU2**: low power, low cost (~$100), very open hardware
  - open hardware schematics, has coreboot support
  - add `meta-pcengines` and set `MACHINE = "pcengines-apu2"`
    then use the wic image - `dd` it to a drive and boot into Xen
  - hardware supports D-RTM - that's a big deal: see the OpenXT community for more!

- **runqemu** !
  - `runqemu xen-image-minimal nographic slirp`
    - launch Xen at your command prompt!
      - nb: is currently pretty experimental - has worked with MACHINE = "genericx86-64"; may need some work.

Thanks

- Xen Community
  - for the Xen hypervisor and Linux kernel work to make this possible
    - Stefano Stabellini @ Xilinx, Julien Grall @ Amazon
  - for the interest in the Raspberry Pi 4
    - Roman Shaposhnik @ Eve Project, Zededa
  - hey! See you at the Xen Design and Developer Summit next week!
- Yocto and OpenEmbedded meta-virtualization Community
  - for the first Xen on Raspberry Pi 4 meta-virtualization patch submissions
    - Corey Minyard @ MontaVista, Stewart Hildebrand @ DornerWorks
  - for the support for bringing Xen work in, in a maintainable way
    - Bruce Ashfield @ Xilinx, Bertrand Marquis @ ARM
  - for this talk opportunity!
    - Tim Orling @ Yocto Project, Intel, David Reyna @ Wind River
- OpenXT Community
  - for supporting my involvement with Xen and OpenEmbedded
- Raspberry Pi Community
  - for developing and promoting accessible hardware with Open Source software